

Bouton de commande lave vaisselle Whirlpool

Referentie: 481241029212



OMSCHRIJVING

Bouton de commande lave vaisselle Whirlpool

Référence: 481241029212

Couleur: brun

Appareils compatibles:

851153529950 ADP6637BR LAVE-VAISSELLE
851153529951 ADP6637BR LAVE-VAISSELLE
851153529952 ADP6637BR LAVE-VAISSELLE
851153629910 ADP6638BR LAVE-VAISSELLE
851153629940 ADP6639BR LAVE-VAISSELLE
851153629941 ADP6639BR LAVE-VAISSELLE
851153629942 ADP6639BR LAVE-VAISSELLE
851157029841 ADP4547 LAVE-VAISSELLE
854273029920 ADP6730BR

LAVE-VAISSELLE
854273529920 ADP6735BR
LAVE-VAISSELLE
854273529929 ADP6735BR
LAVE-VAISSELLE
854273529970 ADP6736BR
LAVE-VAISSELLE
854273529979 ADP6736BR
LAVE-VAISSELLE

FICHE TECHNIQUE

Merk	WHIRLPOOL
EAN13	3663216039676