

Patte de bouton de déverrouillage lave linge Electrolux

Referentie: 1108268002



OMSCHRIJVING

Patte de bouton de déverrouillage lave linge Electrolux

Référence 1108268002

Appareils compatibles:

91400203500 LAV88830-W LAV88830-W
91400203501 LAV88830-W LAV88830-W
91400203502 LAV88830-W LAV88830-W
91400205700 LAV88830-W LAV88830-W
91400205701 LAV88830-W LAV88830-W
91400205702 LAV88830-W LAV88830-W
91400205800 LAV76730-W LAV76730-W
91400205900 LAV74730-W LAV74730-W
91400206000 LAV72730-W LAV72730-W
91400206100 LAV72530-W LAV72530-W
91400206200 LAV70530-W LAV70530-W
91400207100 LAV88830-W
LAV88830-W
91400207800 LAV88830-W
LAV88830-W
91400209400 LAV88830-W
LAV88830-W
91400210700 LAV88830-W
LAV88830-W
91400213300 LAV72630-W
LAV72630-W
91400214800 LAV86730-W LAV86730-W
91400232700 LAV82740-W LAV82740-W
91400237700 LAV86741 LAV86741

91400237800 LAV82741 LAV82741
 91400238500 LAV88840 LAV88840
 91400256000 LAV86741 LAV86741
 91400256100 LAV82741 LAV82741

FICHE TECHNIQUE

Merk	ELECTROLUX
EAN13	3663216037207